


Sheet No.	Proj. No.	Sheet No.
MD		



DO NOT USE WITHOUT CONSENT OF STRUCTURAL PROJECT MANAGER
(USE ONLY FOR GIRDER SPACING 10'-3" TO 12'-0")

For 3-1/2" panel use 3" panel sheet ("SPN1" or "SPN3") and revise dimensions in the detail as shown below.

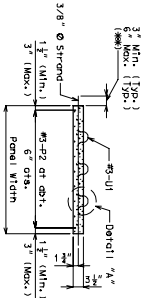


** Prestressing strands to extend 6" or to within 1" of bottom panel.

SECTION C-C

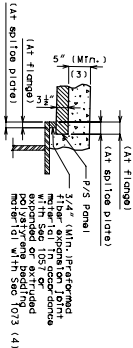

SECTION A-A

Note: The thickness of the precast fiber panel can be adjusted to suit the slab thickness dimension and the reinforcement spacing. The reinforcement spacing shall be within the limits noted in the general notes.

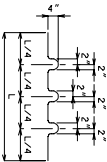

UT bars may be ordered at right angles to location and spacing shown. UT bars shall be placed between P bars.

Detail
Checked

Note: This drawing is not to scale. Follow dimensions.

Sheet No. of

Created in
Microstation